



## Encryption Dongle Driver Instructions

1. Make sure your dongle is not plugged into the computer and do not plug it in until prompted to do so.
2. Update to version 4.03.04 of the AutoPilot Software by following the directions at <http://www.innovalongarm.com/resources/software-updates/autopilot-update.html>
3. After updating AutoPilot go to Help and then Diagnostics from the top menu bar of AutoPilot. A window similar to the one below will appear:

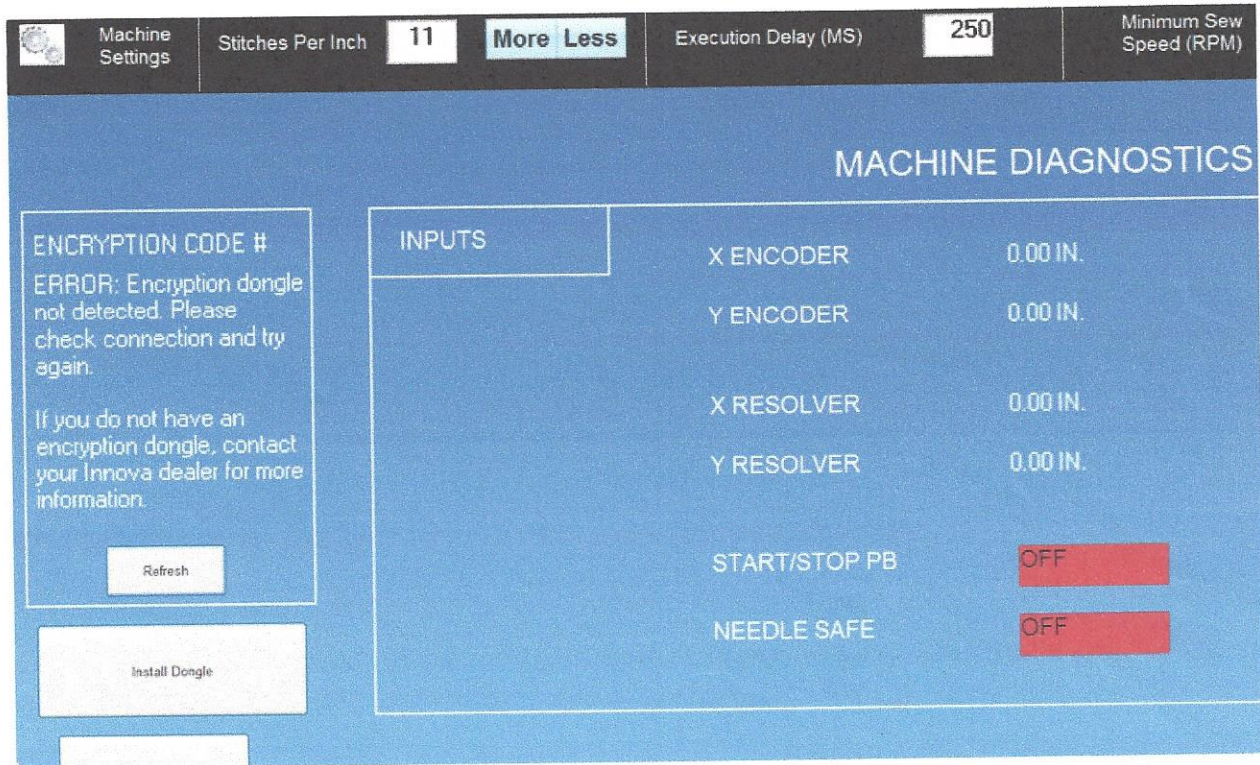

4. Click the button for Install Dongle on the left hand side.
5. The following screen will appear:

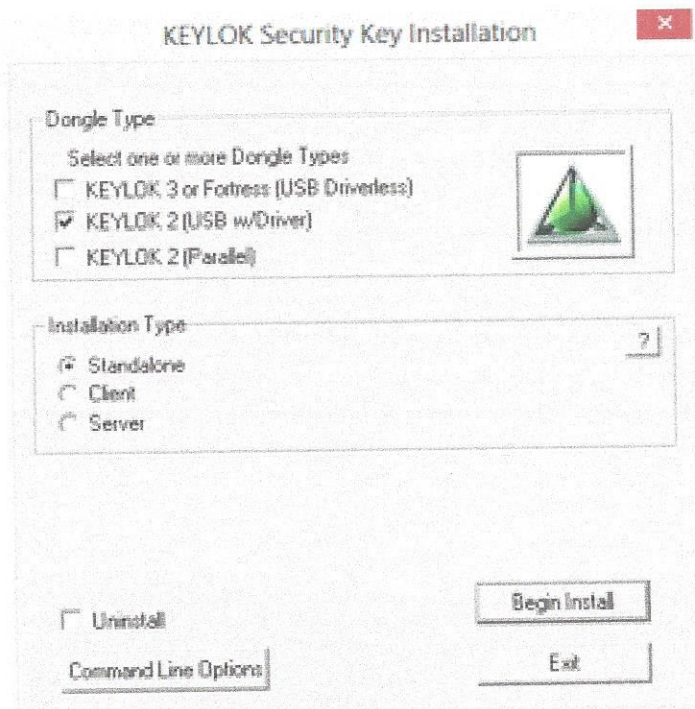

## Encryption Dongle Driver Instructions

6. Check the box for KEYLOK2 (USB w/Driver) and pick the Standalone Installation Type.
7. Hit Begin Install and press Next or Finish on the remaining screens for the installation.
8. When you are back at the blue Diagnostics screen, press Done and then Exit the Autopilot software.
9. Plug in the USB Encryption Dongle
10. Wait at least 1 minute for the Dongle to be recognized by Windows the first time.
11. Open AutoPilot and return to the Diagnostics screen
12. Your encryption number will now be shown on the left hand side above the button for Install Dongle Driver. This is the number that you will give to pattern designers when purchasing encrypted patterns. Be sure to include any leading zeros and letters in the number.