


## Instructions for kitchen 1 apron 001 – quilt on longarm, finish on domestic machine


Need 1.25 yards backing fabric  
1.25 yards top fabric  
Batting  
3/4 yard fabric for binding and apron ties

Loading fabric – you are going to be stitching the apron sideways so if your fabric is directional you need to load it with the top of the fabric on the left side.

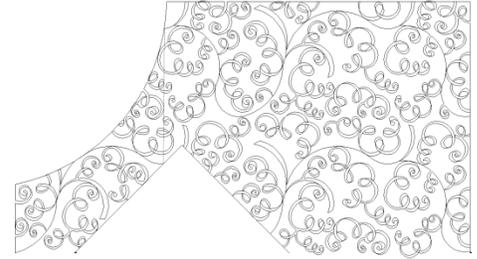

Load pattern


Make a copy of the pattern  
Flip the copy vertically  
Line up the two patterns

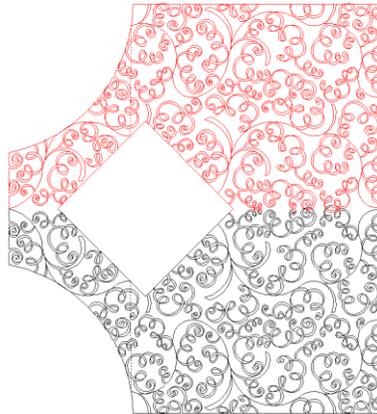

Quilt the first pattern  
Roll the fabric  
Line the second pattern up to the stitched one  
Quilt the second half  
Roll quilt back halfway so that you have the open square in the quilting area  
Choose a seasonal pattern, put in a name, whatever you want to personalize the quilt  
Quilt  
Pull from machine and trim up next to outside stitching line  
Take your binding fabric, cut 7 strips that are WOF x 2.25”  
Use 3 of these to make binding for apron and bind  
Use the other 4 strips to make the apron ties



Attach ties at neck and waist.

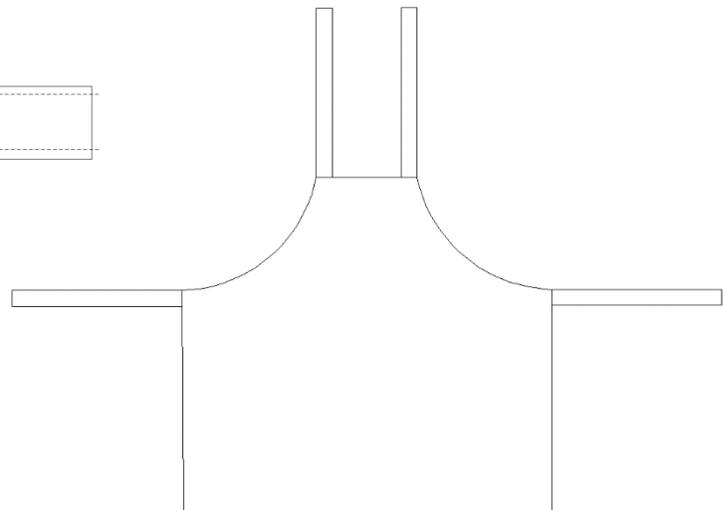

## Instructions for kitchen 1 basket 001 – quilt on longarm and finish on domestic machine

The pattern is about 18" square so load backing, batting and top fabric large enough to accommodate the pattern size.


Load pattern and quilt.

Remove from machine.

Make about 65" of binding, then bind the piece.


To make into a basket –

Option 1: Bring 2 edges together and stitch. You can put the "corners" on either the inside or the outside.

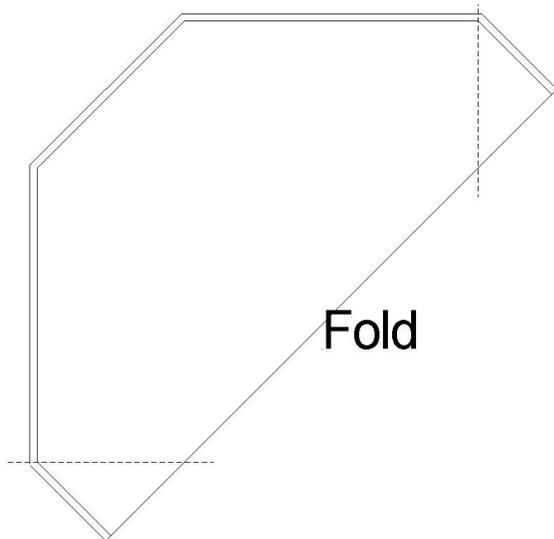


Refold so that you can stitch the other 2 corners.

Option 2: Stitch ribbons to the 8 corners and tie to make the basket.

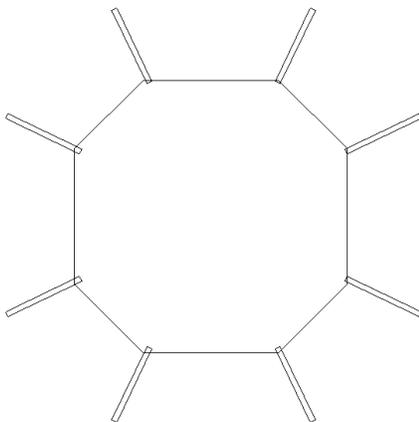

## Instructions for Kitchen 1 oven mitt 001 – quilt on longarm and finish on domestic machine

The pattern is about 8" x 30" so load appropriately sized backing, batting, and top fabric. Since this will be used as a pot holder I recommend using Insul-Bright batting with the heat resistant core. This size will make a small oven mitt. To make a medium sized one add 1" to width, to make a large one, add 2" to width. Be sure to add length proportionally. Load pattern and stitch.

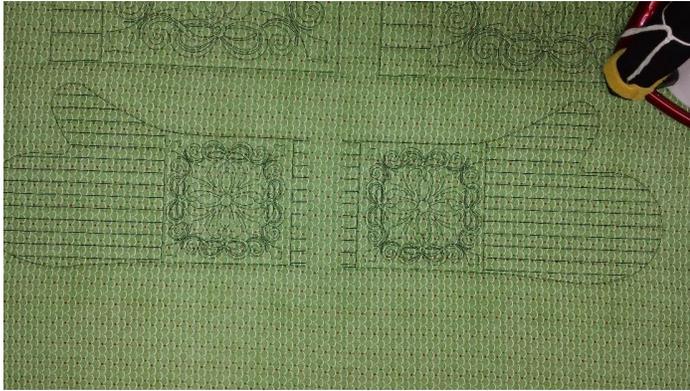


Remove from long arm. If you are using the pattern with the open square put in your own design and quilt before removing from the machine. There are 2 ways to finish the pot holder.

### Method 1 – no lining with bound edge

Put right sides together and stitch together leaving top unstitched. Make about 20" of binding and apply to top edge and finish.

### Method 2 – completely lined no binding necessary

Lay the quilted items on lining fabric and cut out a matching mitten shape for both sides.

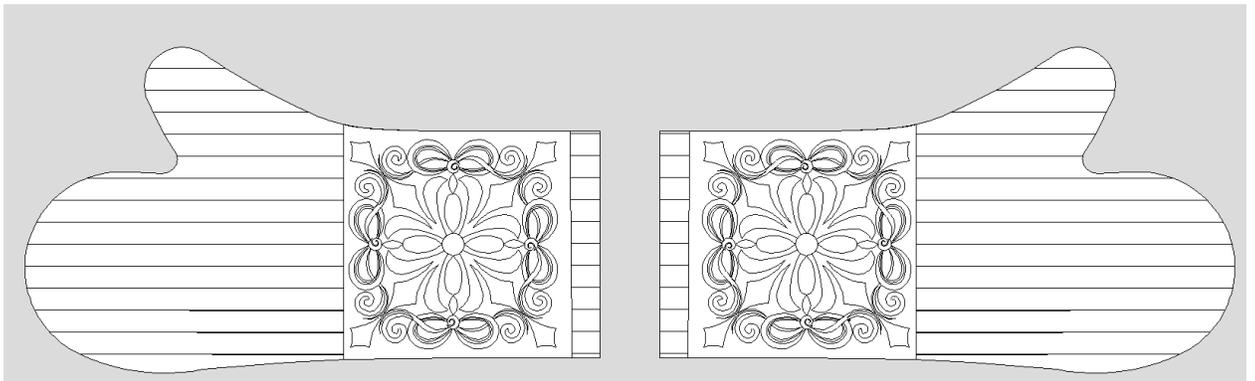

With right sides together attach a lining to a mitt and stitch across the top. Repeat for other side.





Lay out the mitt/lining sections, right side up.



Put together, right sides together. The 2 quilted parts should be on top of each other and the linings on top of each other.

Stitch all the way around the mitt leaving a 4" opening for turning.

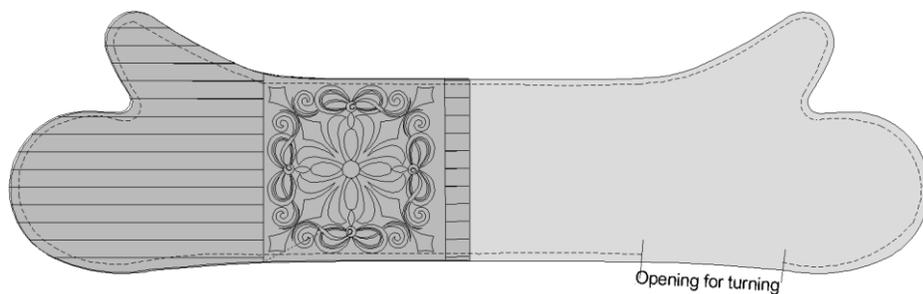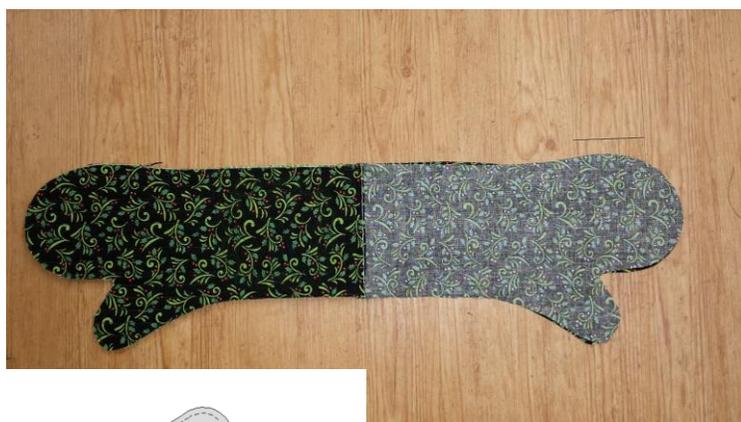

Clip curves and turn right side out. Stitch the opening closed (just use your sewing machine, this will not show).



Then stuff the lining down into the mitt. You may want to top stitch around the top to keep the lining in place.




**Instructions for Kitchen 1 oven mitt 002 – quilt on longarm and finish on domestic machine**

Load backing, batting, and top fabric on longarm. The pattern is about 8" x 32" so you will need enough fabric to accommodate. You will also need a ¾ to 1 yard of contrasting fabric for pockets and binding.


Since you will be using this as a pot holder I suggest using Insul-Bright with the heat resistant core for the batting.

Load pattern and quilt out. If you are using the pattern with square put a pattern of your own choosing into the square  
Remove from longarm. Trim to outside stitching line.

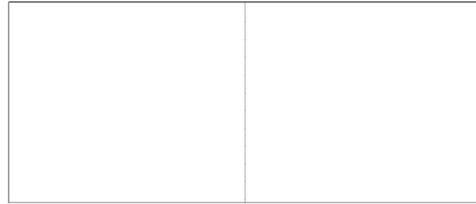

the open and quilt.


From contrasting fabric cut 2 rectangles 8" x 16". Fold, right outside, each in half and press.

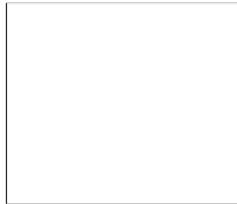

sides on the


Place rectangle on top of pot holder. Folded edge is center the raw edges line up at ends. Trim pockets to

towards the match mitt.

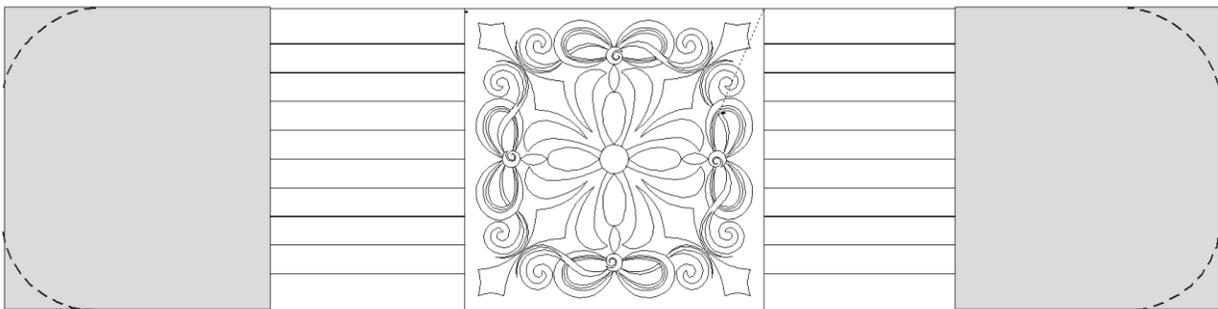

Stitch pockets in place using a basting stitch at a scant ¼".


Make about 85" of binding and bind.

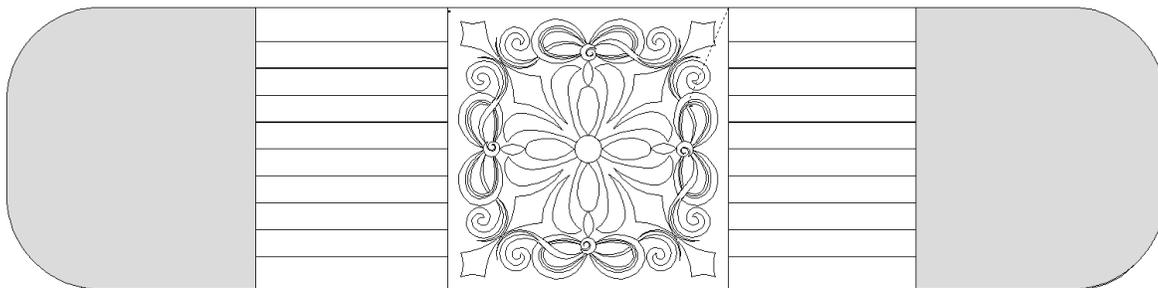


### Instructions for Kitchen 1 pot holder 001 – quilt on longarm and finish on domestic machine

Load backing, batting, and top fabric on longarm. The pattern is about 8" x 10" so you will need enough fabric to accommodate. You will also need a ½ yard of contrasting fabric for pockets and binding. Since you will be using this as a pot holder I suggest using Insul-Bright with the heat resistant core for the batting.

Load pattern and quilt out. If you are using the pattern with the open square put a pattern of your own choosing into the square and quilt. Remove from longarm. Trim to outside stitching line.

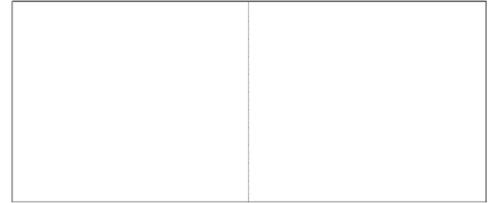

From contrasting fabric cut 1 rectangles 8" x 14". Fold, right sides on the outside, each in half and press.

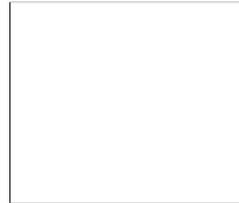

Place rectangle on top of pot holder. Folded edge is towards the top and the raw edges line up at ends. Trim pockets to match mitt.

Stitch pocket in place using a basting stitch at a scant ¼".

Make about 40" of binding and bind.

